
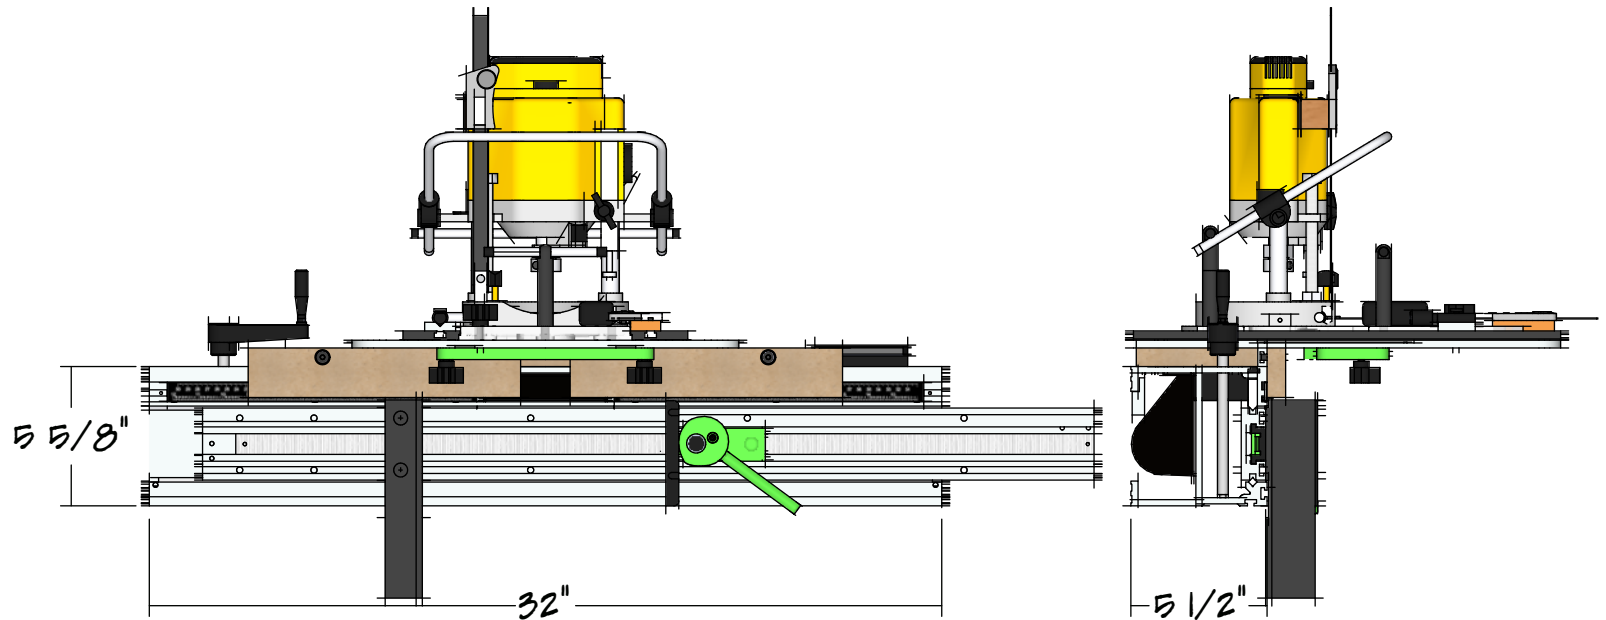


Workstation Space Requirements

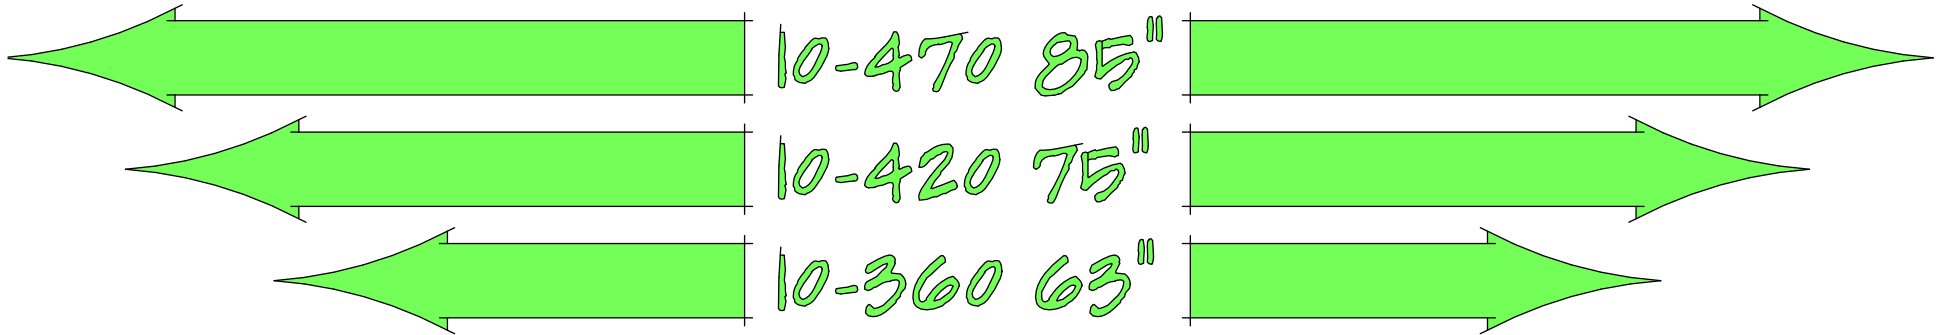

When installing your new Router Boss, remember to allow space to the left and right of the machine for the travel of the sliding bar. Allow space as shown above for the model you have chosen.