
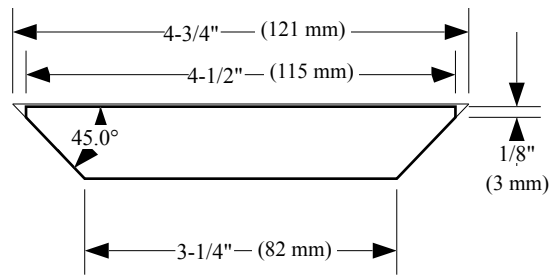


Dimensions for Router Fence and Zero Clearance Insert

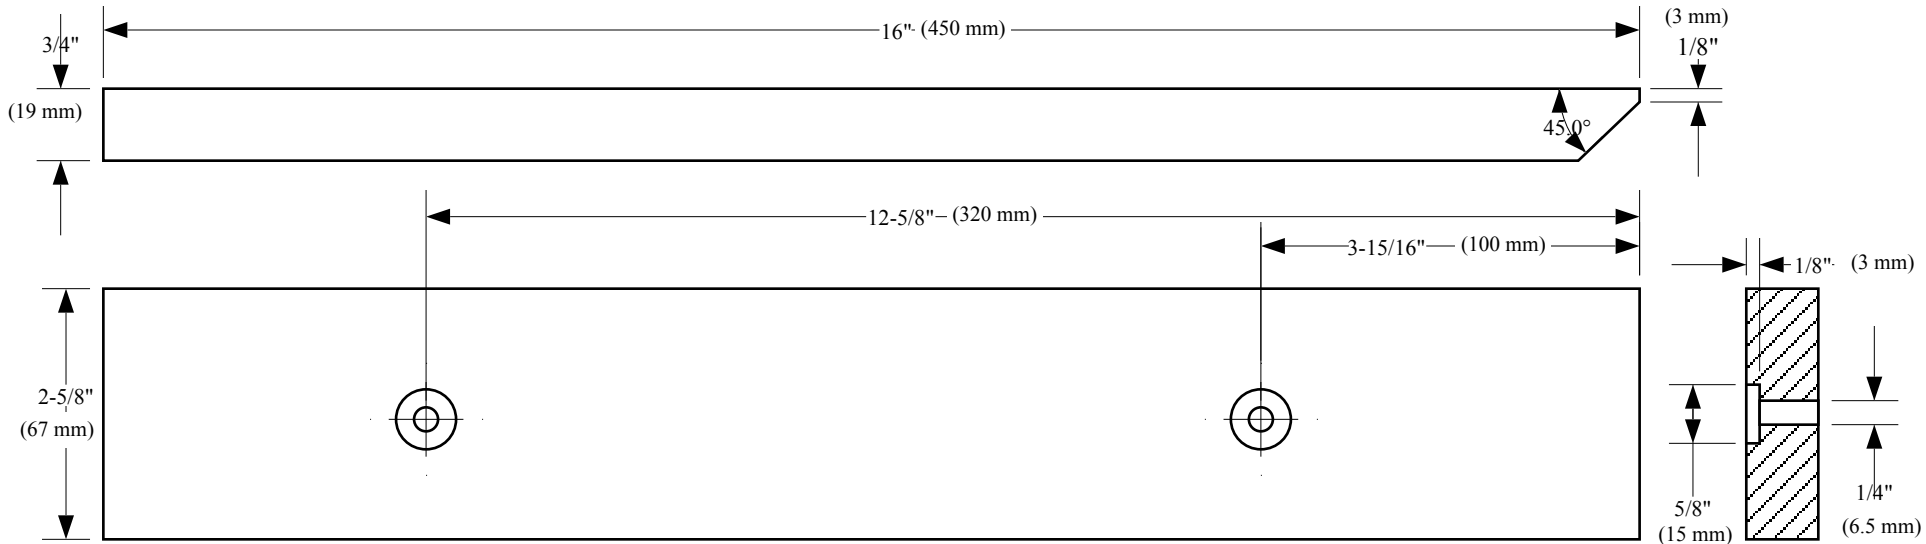

Note 1: The actual thickness is not critical, but it is best to cut all the pieces out of the same material. They must all be the exact same thickness (this is critical). If you want extra centerpieces, cut them all from the same material. It is best to use a high-density melamine board.

Note 2: After making one 45° cut at the end of a board, set a stop at 4-3/4" (121 mm), flip the board over, and cut another. If you want more, flip the board over and cut another. Once you've cut as many Zero Clearance Inserts as you want, cut the length of each down to 4-1/2" (115 mm)